

INSTALLATION & PREDELIVERY

TABLE OF CONTENTS

BOAT RIGGING

REMOTE CONTROLS	8
CONTROL SYSTEM SELECTION	8
CONTROL INSTALLATION	9
CONTROL CABLE ROUTING	10
INFORMATION DISPLAY SYSTEMS	11
ENGINE MONITOR SYSTEM	11
SYSTEMCHECK GAUGES	11
I-COMMAND DISPLAYS	11
SYSTEMCHECK (MWS) HARNESS CONNECTIONS	12
I-COMMAND HARNESS CONNECTIONS WITH MECHANICAL REMOTE CONTROL	13
EVINRUDE ICON / I-COMMAND HARNESS CONNECTIONS	14
BATTERY INSTALLATION	15
BATTERY RECOMMENDATIONS	15
BATTERY CONNECTIONS	15
BATTERY CABLE REQUIREMENTS	16
BATTERY SWITCHES AND MULTIPLE BATTERIES	16
AUXILIARY BATTERY CHARGING	17
BATTERY AND SWITCH WIRING DIAGRAMS	18
FUEL SYSTEM REQUIREMENTS	20
REGULATIONS AND GUIDELINES	20
PERMANENT FUEL TANKS	20
PORTABLE FUEL TANKS	20
FUEL HOSE	20
FUEL SYSTEM PRIMER	21
FUEL FILTERS	21
FUEL FLOW REQUIREMENTS	22
REMOTE OIL TANK INSTALLATION (V4 – V6)	23
LOCATION	23
MOUNTING	23
REMOTE OIL FILL KIT (OPTIONAL)	25
CABLE AND HOSE INSTALLATION	26
BOAT CABLE AND HARNESS ROUTING	26
PROTECTIVE SLEEVE/CONDUIT	27
BATTERY CABLES	27
FUEL HOSE	27
OIL SUPPLY HOSE	27
OETIKER CLAMP SERVICING	28

OUTBOARD INSTALLATION

HULL PREPARATION31

TRANSOM MEASURING AND DRILLING33

LIFTING THE OUTBOARD44

STEERING SYSTEMS46

OUTBOARD MOUNTING48

OUTBOARD RIGGING

COMMON PRACTICES – ALL MODELS51

 CONTROL CABLE IDENTIFICATION51

 CABLE RETAINER CLIP INSTALLATION51

EVINRUDE E-TEC 90° V MODELS 200–300 HP52

EVINRUDE E-TEC 60° V MODELS 115–200 HP58

EVINRUDE E-TEC MODELS 40–90 HP65

EVINRUDE E-TEC MODELS 15–30 HP71

FUEL AND OIL PRIMING

FUEL REQUIREMENTS75

FUEL SYSTEM PRIMING76

OIL REQUIREMENTS77

 RECOMMENDED LUBRICANTS77

 OIL INJECTION RATE77

 BREAK-IN OILING78

OIL SUPPLY PRIMING79

PREDELIVERY

BEFORE START-UP83

RUNNING CHECKS84

PROPELLERS86

 PROPELLER SELECTION86

 PROPELLER HARDWARE INSTALLATION87

WATER TEST AND FINAL ADJUSTMENTS88

 ENGINE MOUNTING HEIGHT AND JACK PLATE ADJUSTMENT88

 FUEL SYSTEM VACUUM88

 ENGINE WATER PRESSURE88

 WATER PRESSURE CHART89

 TILT LIMIT SWITCH ADJUSTMENT (75 – 300 HP)90

 TRIM SENDING UNIT ADJUSTMENT (75 – 300 HP)91

 TRIM SENDING UNIT ADJUSTMENT (25 – 60 HP)92

 TRIM TAB ADJUSTMENT93

 DUAL-OUTBOARD ALIGNMENT94

INDEX95

SAMPLE PREDELIVERY CHECKLIST97