
TABLE OF CONTENTS

SERVICE PRODUCTS INDEX	1
DPS SYSTEM OVERVIEW	1
MIDSECTION IDENTIFICATION	2
DPS VERSION IDENTIFICATION	3
DYNAMIC POWER STEERING (DPS)	5
DYNAMIC POWER STEERING (DPS) - THEORY OF OPERATION	5
DYNAMIC POWER STEERING (DPS-1) - "EARLY PRODUCTION"	7
DYNAMIC POWER STEERING (DPS-2) - "CURRENT PRODUCTION"	9
DPS TROUBLESHOOTING CHARTS	13
DPS-1 TROUBLESHOOTING CHART	13
DPS-2 TROUBLESHOOTING CHART	16
DPS WIRING DIAGRAMS	19
DPS1 / DPS2 WIRING	20
DPS2 CONTROL MODULE	22
DPS MODULE	23
DPS-1 SYSTEM TESTS	23
DPS-2 SYSTEM TESTS	24
LOAD STEERING FIRMWARE	25
DPS SYSTEM UPDATES	26
EVDIAG6 - DPS ASSIST ADJUSTMENT	27
COLOR TOUCH SCREEN - DPS ASSIST ADJUSTMENT	28
NAUTILUS 3.5 COLOR SCREEN - DPS ASSIST ADJUSTMENT	29
DPS ELECTRIC MOTOR	31
MOTOR DERATING	31
ELECTRIC MOTOR	32
STERN/ SWIVEL SYSTEM OVERVIEW	35
STEERING PRESSURE SENSOR CALIBRATION (AFA AND NEWER MODELS ONLY)	35
STEERING POSITION SENSOR CALIBRATION	37
DUAL OUTBOARD INSTALLATIONS	37
CALIBRATE END POINTS	37
CALIBRATE TURN LIMITS	38
FILLING AND BLEEDING THE HYDRAULIC STEERING SYSTEM	39
HYDRAULIC STEERING FLUID	39
SINGLE STATION / DUAL ENGINE INSTALLATIONS	39
SINGLE STATION STEERING INSTALLATIONS	39
MANUAL METHOD	39
POWER PURGE METHOD	43
STEERING SYSTEM CHECKS	45
G2 66°V6 AND 74°V6 FULL FEATURED STERN/ SWIVEL STEERING SHAFT VERTICAL MOVEMENT	47

TABLE OF CONTENTS

ACCESSORY KITS	49
HYDRAULIC TIE BAR KIT (TWIN G2 ENGINE INSTALLATION).....	49
MULTIPLE OUTBOARD TRANSOM.....	50
DPS TROUBLESHOOTING	53
DIAGNOSTIC SOFTWARE INSPECTIONS.....	53
DATA LOGGING	55
DPS2 - STEERING SYSTEM TEST (AFA AND NEWER MODELS).....	56
DPS MOTOR DOES NOT RUN / CODE 211	57
DPS MOTOR CONTINUES TO RUN / RUNS CONSTANTLY	59
UNRESPONSIVE AND/OR SLUGGISH STEERING	61
ONLY GET STEERING ASSIST IN ONE DIRECTION, NOT THE OTHER.....	63
STEERING IS STIFF IN ONE DIRECTION OR THE OTHER	64
STEERING WHEEL KEEPS TURNING AND DOES NOT STOP / HELM "FREEWHEELS" IN ONE DIRECTION	65
DPS2 MODULE TROUBLESHOOTING	66
DPS - COUPLER	70
DPS SPECIFIC FAULT CODES	71
DPS FAULT CODE CHART	71
FAULT CODE SERVICE ACTIONS	75
FAULT CODE 211	75
FAULT CODE 212	75
FAULT CODE 213	75
FAULT CODE 214	75
FAULT CODE 215	76
FAULT CODE 216	76
FAULT CODE 217	76
FAULT CODE 218	76
FAULT CODE 219	76
FAULT CODE 220	77
FAULT CODE 221	77